
Capacitive Sensors BCS R08RRE-PSM80C-EP00,3-GS75 Order Code: BCS012T

BVLLAL

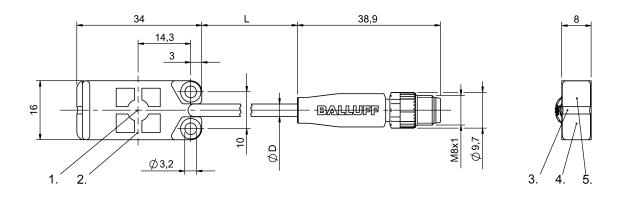

1) Sensing surface, 2) Housing, 3) Cover, 4) Power indicator green, 5) Function indicator yellow

Basic features

Approval/Conformity	cULus
	CE
	WEEE
	EAC
Basic standard	IEC 60947-5-2
Scope of delivery	Holder
	Installation guide
Sensitivity	Switching distance teachable
Series	R08
Trademark	Global

Display/Operation

Function indicator	yes
Power indicator	yes
Setting	Teachable

Electrical connection

Cable diameter D	3.40 mm
Cable length L	0.3 m
Conductor cross-section	0.14 mm ²
Connection	4-pin
Number of conductors	4
Polarity reversal protected	yes
Protection against device mix-ups	yes
Short-circuit protection	yes

Electrical data

Switching output	PNP normally open (NO)
Interface	
MTTF (40 °C)	98 a
Functional safety	
IP rating	IP67
Contamination scale	1
Ambient temperature	-2570 °C
Environmental condition	S
Voltage drop static max.	1.5 V
Utilization category	DC -13
Switching frequency	50 Hz
Ripple max. (% of Ue)	10 %
Residual current Ir max.	10 µA
Ready delay tv max.	200 ms
Rated operating voltage Ue DC	24 V
Rated operating current le	50 mA
Rated insulation voltage Ui	75 V DC
Operating voltage Ub	1230 VDC
No-load current lo max. at Ue	12.0 mA
Load capacitance max. at Ue	0.33 μF

Capacitive Sensors BCS R08RRE-PSM80C-EP00,3-GS75 Order Code: BCS012T



Material

Cover materialPPHousing materialPPMaterial jacketPURMaterial sensing surfacePP

Range/Distance

15.0 %
18 mm
8 mm
5.0 %
20 % [-555 °C]

Mechanical data

Dimension	34 x 16 x 8 mm
Installation	for flush mounting
Size	Block style
Tightening torque	0.2 Nm

Remarks

For full calibration connect input DI to L+ for 2...7 seconds. For empty calibration connect to L+ for 7..12 seconds.

Input DI can be used for teaching the switching point. In normal operation input DI should be connected continuously to L-.

The potentiometer does not have a fixed stop, but can be turned endlessly without destroying anything.


If no change in the switching signal is detected, the potentiometer should be turned forwards or backwards until a signal change occurs at the output. For more information about MTTF and B10d see MTTF / B10d Certificate

Indication of the MTTF- / B10d value does not represent a binding composition and/or life expectancy assurance; these are simply experiential values with no warranty implications. These declared values also do not extend the expiration period for defect claims or affect it in any way.

Connector Drawings



Wiring Diagrams

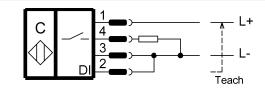

Capacitive Sensors BCS R08RRE-PSM80C-EP00,3-GS75 Order Code: BCS012T



Help Views

